



2409 Plantside Drive
Jeffersontown, Kentucky 40299
Phone: 1-800-626-1126 (toll free)
www.rev-a-shelf.com

COMPAGNUCCI®



WIRE PRODUCTS AND ENGINEERING

Pattumiera a 2 cesti
Pull-out Dustbin with 2 containers
Art. 469

1




M5 x 3,5

2




(4) 4x25

3




(4) 4x20

4




(4) 4x16

5

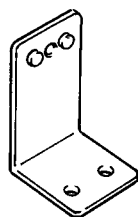


(4)

BOTTOM APPLICATION

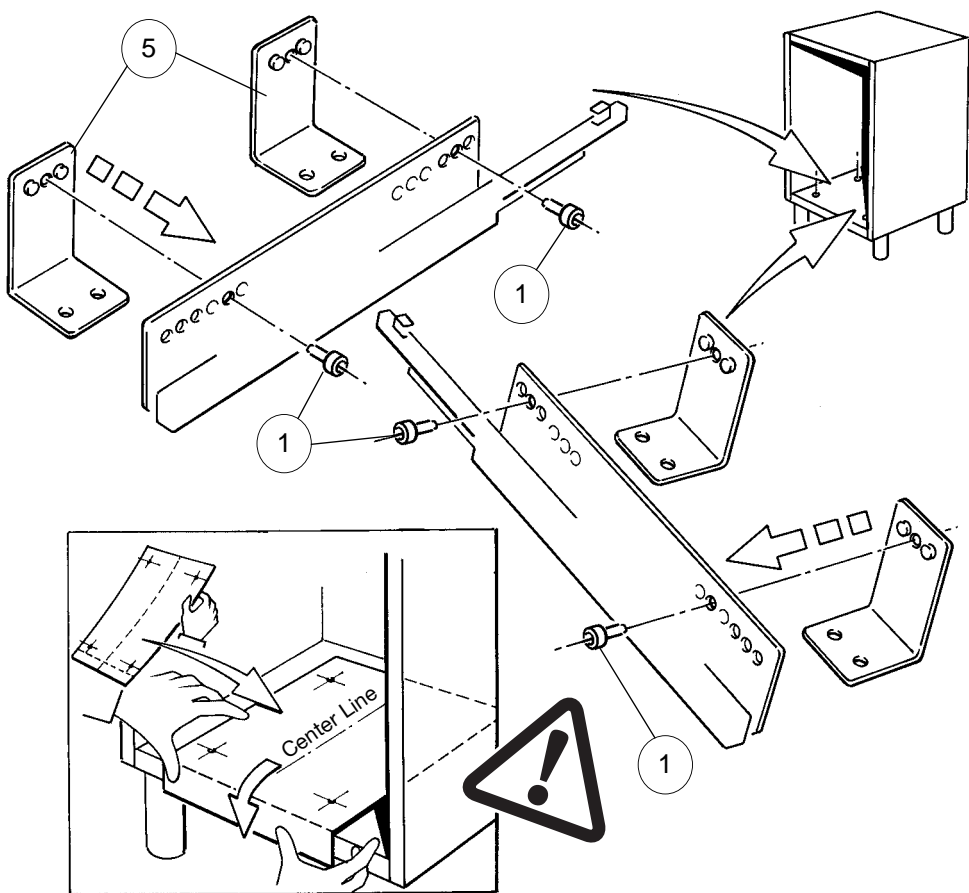


- 1. Fix Brackets to slides
- 2. Fix slides to bottom cabinet referring to template


FRONT DOOR WITH HINGES

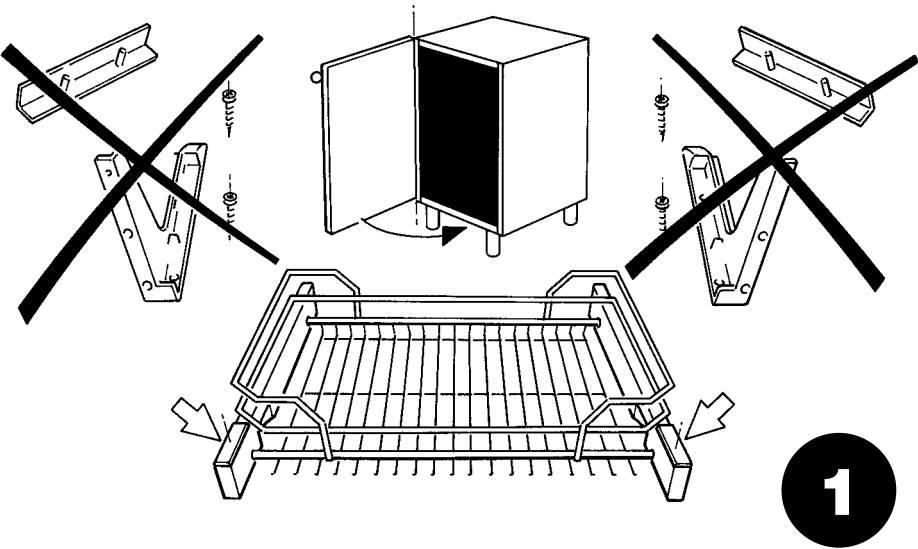



INSTALL RECTANGULAR COVER OVER PLASTIC SLIDE COVER

FRONT DOOR APPLIED TO PULL-OUT BASKET


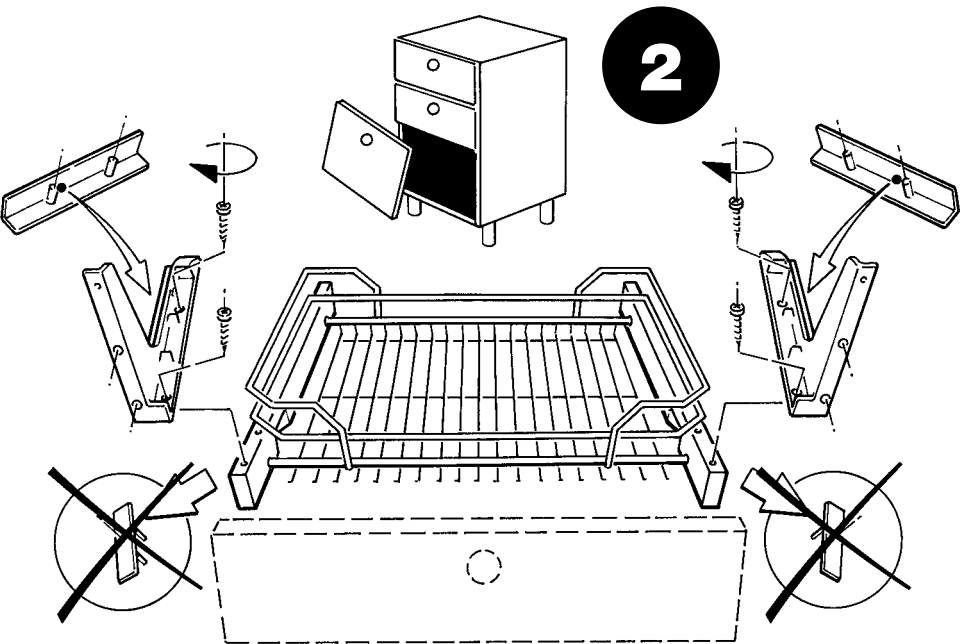


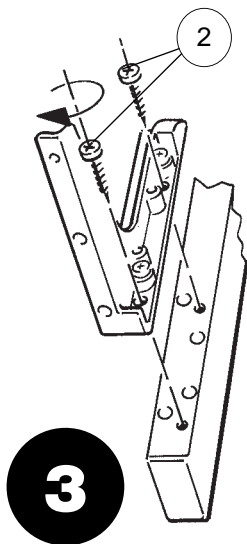

ATTACH DOOR MOUNT
BRACKETS TO TOP OF
PLASTIC SLIDE COVER
USING SCREWS

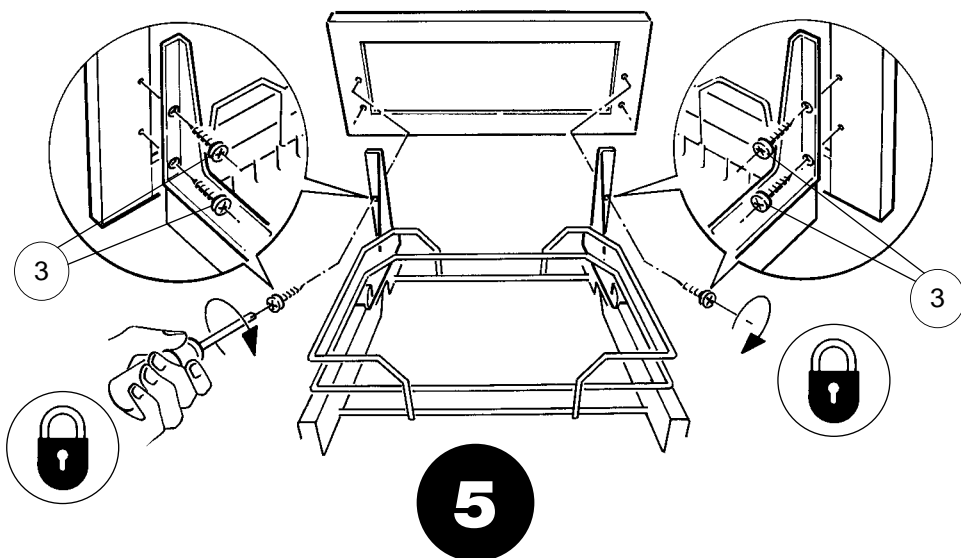
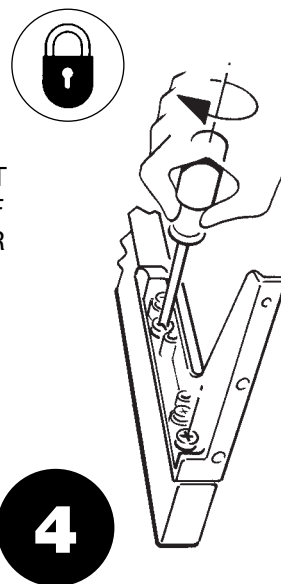


ATTACH BASKET WITH BRACKETS TO CABINET DOOR. BE SURE UNIT IS
CENTERED SIDE TO SIDE AND AT THE PROPER HEIGHT TO ALLOW PROPER
OVERHANG OF DOOR AT TOP AND BOTTOM.

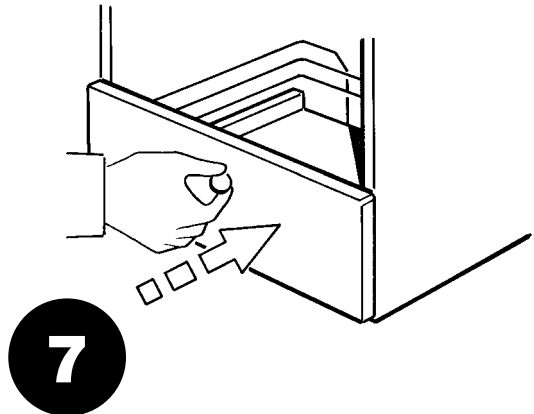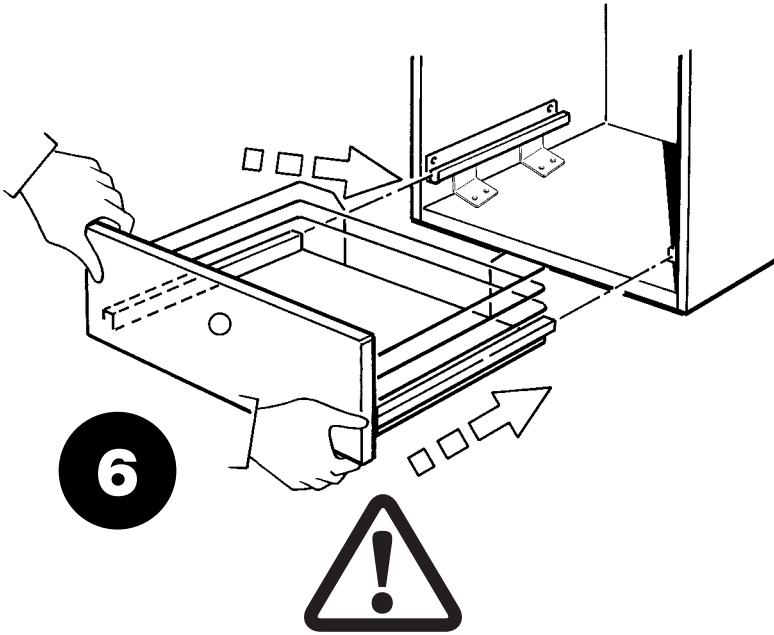


WITH SLIDES IN CLOSED POSITION, SET UNIT ON SLIDES AND PUSH IN AS FAR AS IT WILL GO. THIS WILL ENGAGE LOCK ON TO SLIDES.


ADJUSTING THE FRONT DOOR

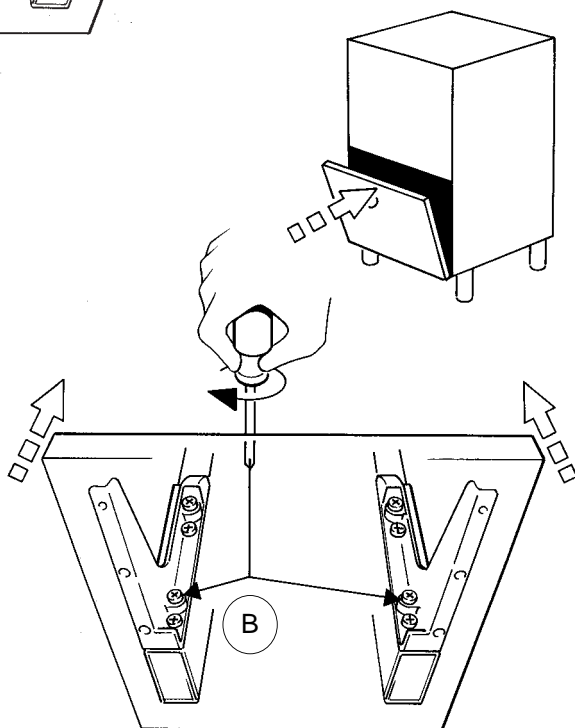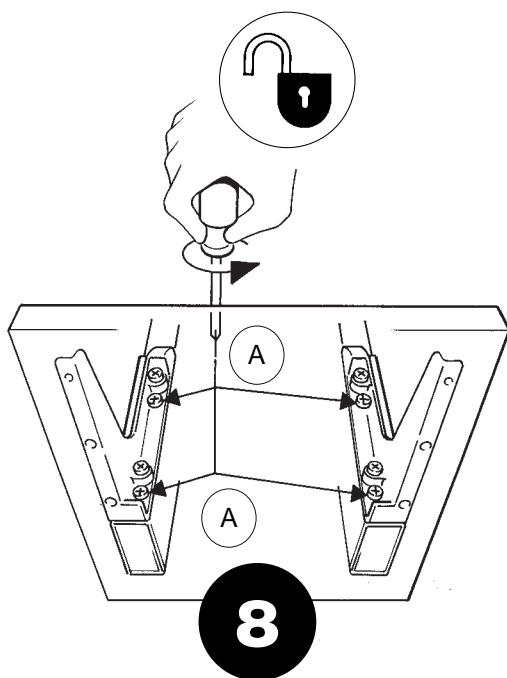


WHEREAS TO TILT TOP OF DOOR OUT,
LOOSEN ATTACHMENT SCREWS (A), TIGHT-
TEN BACK ADJUSTMENT SCREWS (B)

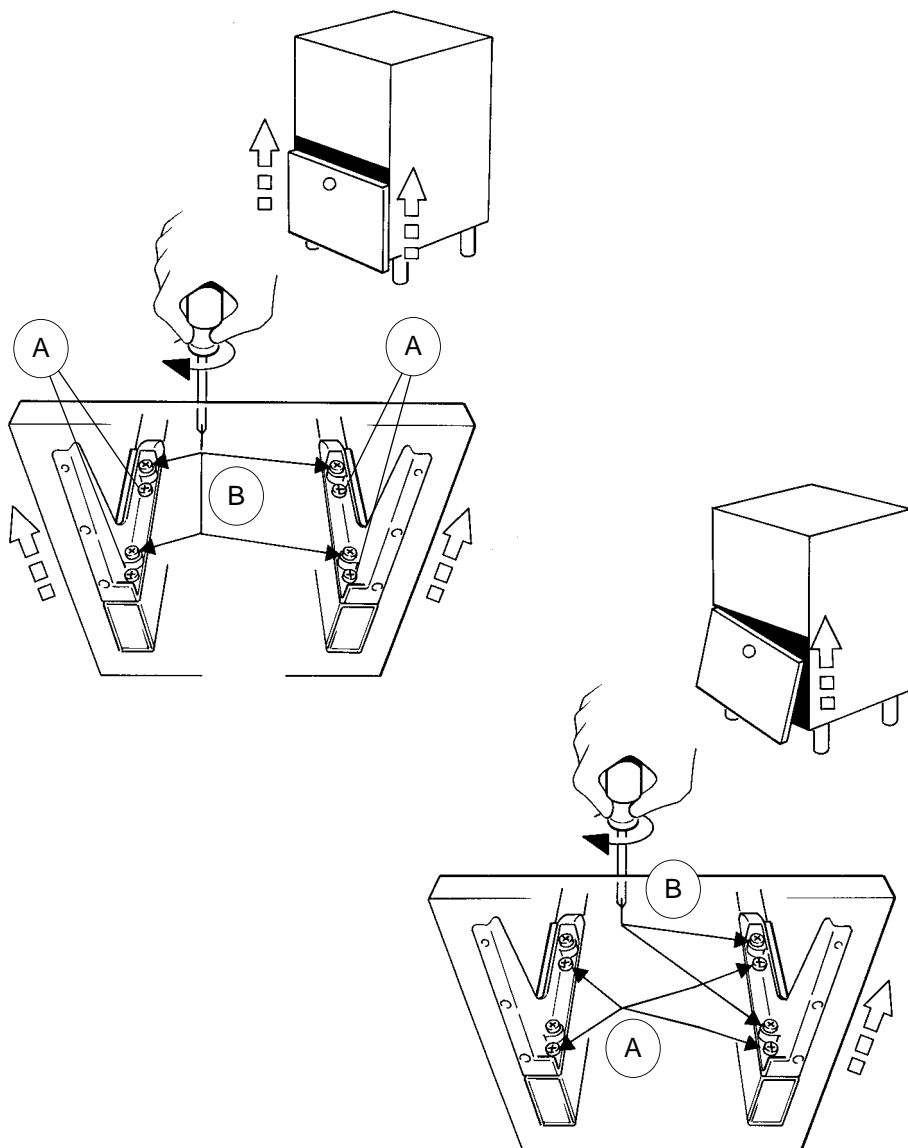


TO RAISE DOOR, LOOSEN ATTACHMENT SCREWS (A) AND TIGHTEN ADJUSTMENT SCREWS (B). TO LEVEL DOOR, RAISE LOW SIDE ONLY UNTIL DOOR IS LEVEL.

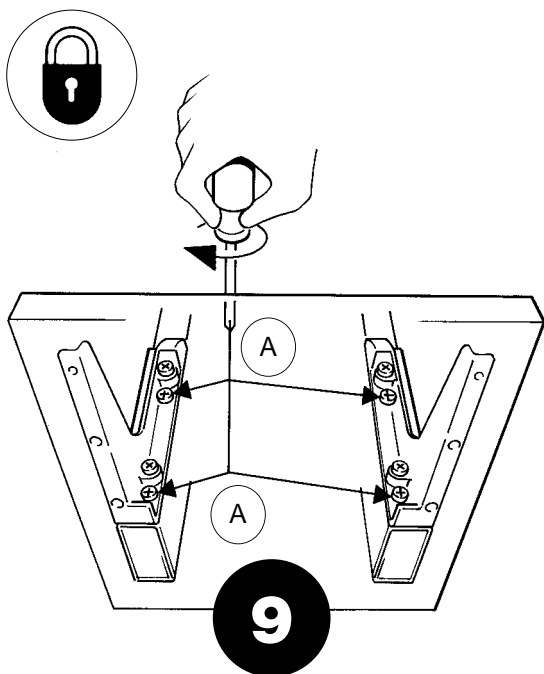

RE-TIGHTEN
ATTACHMENT SCREWS (A).

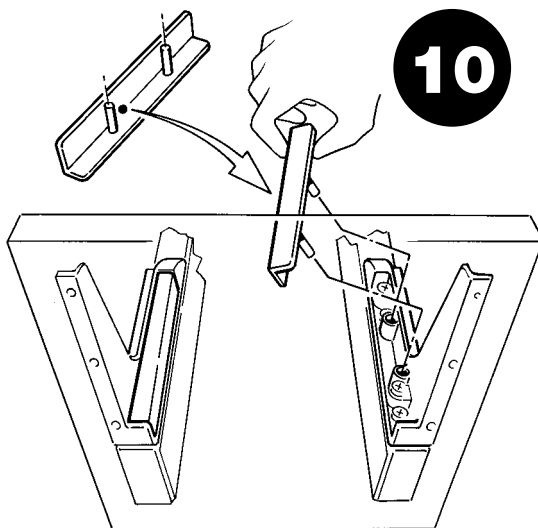


INSTALL SNAP ON COVER OVER ATTA-
CHMENT AND ADJUSTMENT SCREWS.

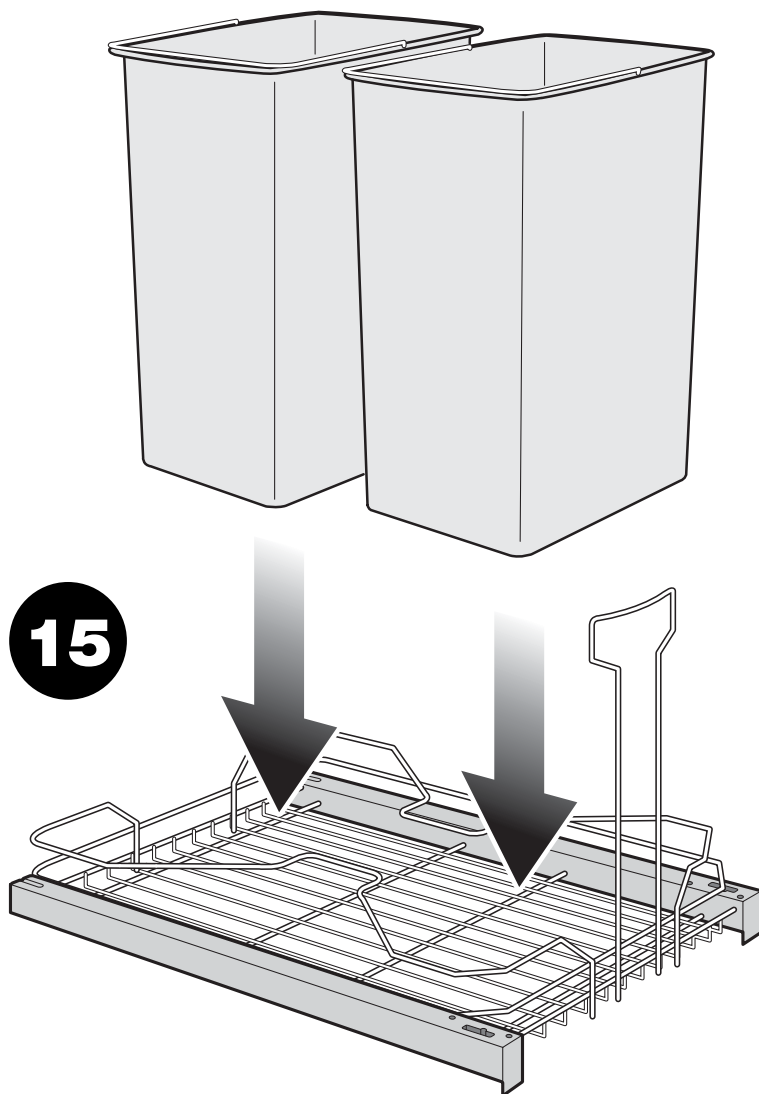


INSTALL THE PLASTIC CONTAINERS INTO THEIR APPROPRIATE PLACES

REMOVING THE UNIT

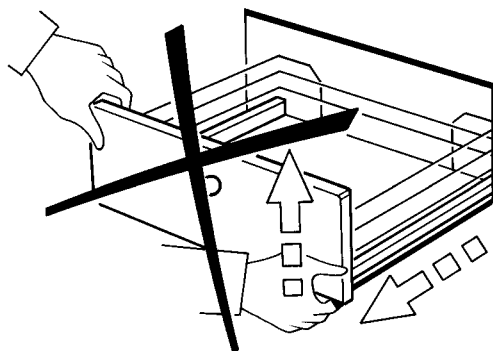


PULL UP THE UNIT NO MORE THAN 1/3 OF THE DEPTH (7" APPROX.)

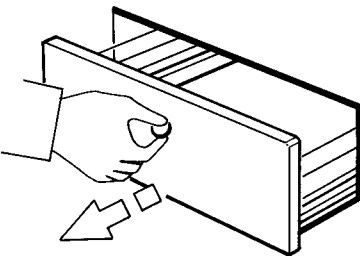


12

13

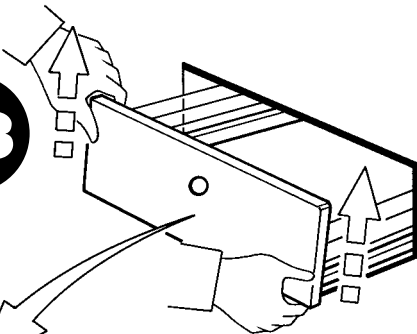

PULL UP THE UNIT BY FRONT DOOR. THIS WILL RELEASE THE ALLUMINIUM SLIDE COVERS FROM THE SLIDES

14

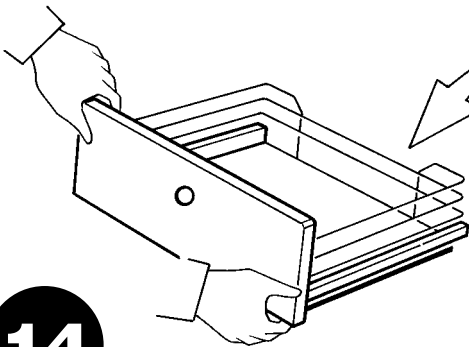

REMOVE THE UNIT



If you have any questions or would like additional information on the rest of our products, please contact our Customer Service Specialists between 8 Am and 5Pm Eastern Time at:

1-800-626-1126